

# Despooling set DU-355




## Advantages:

- Easy and simple to setup
- Smooth wire take off and guidance to the machine adapter
- Good tended wire

## In general:

The set contains a **wire guiding tube**, a **base unit**, a **brush cap assembly**, **two magnets**, and an **allen wrench**.

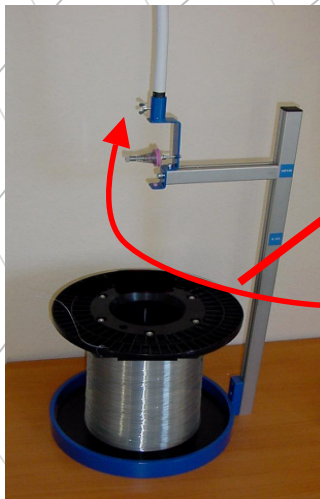

First bring the **tension adjustment arm in position** as shown on the base unit mark. For the adjustment use an allen wrench 2,5mm. The **allen screw** is at the **backside** of the arm showing in detailed picture.

Then **fasten the wire guide tube to the bracket** and tighten the thump screw.



Afterwards place **spool into base unit** with the label side as well as wire is fastened **facing upwards**.

Then **untie the wire** and fix it with a **magnet** at the wire windings.

Adjust the **wire guiding tube at least** with an angle of **90°** without kinks.

Feed in the wire through **bottom eyelet hole**, between the **ceramic discs** and **upper eyelet hole** with wire guide tube.

**Place brush cap** on top of spool.

Finally **remove the magnet** from the wire windings.



Note: **Lifting** or **reducing** the high of the adjustment arm **decreases** or **increases** the **tension** of the stitching wire.